



1= TAP • PULSAR • APPUYER • TIPPEN

Ambient Mode On/Off

Modo de ambiente activado/desactivado

Activer/désactiver le mode ambient

Ambient-Modus Ein/Aus



2= TAPS • VARIAS PULSACIONES • APPUYER • TIPPEN

Previous Track

Pista anterior

Morceau précédent

Vorheriger Track



3= TAPS • VARIAS PULSACIONES • APPUYER • TIPPEN

ANC/Wind Reduction/Off

ANC/reducción de ruidos/desactivado

ANC/Réduction du bruit du vent/Désactivé

ANC/Wind Reduzierung/Aus



HOLD • MANTENER PULSADO • MAINTENIR • HALTEN

Volume Down

Reducir volumen

Baisser le volume

Lautstärke verringern



1= TAP • PULSAR • APPUYER • TIPPEN

Pause/Play/Answer Calls

Pausa/Reproducción/contestar llamada

Pause/Lecture/Répondre à un appel

Pause/Abspielen/Anruf annehmen



2= TAPS • VARIAS PULSACIONES • APPUYER • TIPPEN

Next Track/End/Ignore Phone Calls

Siguiente pista/Terminar/ignorar llamadas de teléfono

Morceau suivant/Raccrocher/Ignorer un appel

Nächster Track/Ende/Anruf ignorieren



3= TAPS • VARIAS PULSACIONES • APPUYER • TIPPEN

Voice Assistant

Asistente de voz

Assistance vocale

Sprachassistent



HOLD • MANTENER PULSADO • MAINTENIR • HALTEN

Volume Up

Aumentar volumen

Monter le volume

Lautstärke erhöhen